

Phil's Psyphon Starter
Listermann Mfg. Co., Inc.
513-731-1130

This product is designed to fit on a standard 3/8' (Outside diameter) plastic racking cane. Remove the cap (if any) from the bottom of the cane, and put it aside. Cut off the bottom 2 inches from the cane, using a tubing cutler or a hacksaw. Remove any burrs, leaving a smooth edge. Slide Phil's Psyphon Starter onto the **bottom** of the cane with the '**notched**' part *closest* to the cane. Slide the 2" piece of cane you cut off into the other end of the Starter, and replace the cap.

Operation

Place the lip of the racking cane assembly into the liquid to be siphoned. Shake the cane UP and DOWN as quickly as possible. The liquid will start to rise in the cane, going up and over the top curve and down the hose into the receiving vessel. Keep shaking it up and down until the liquid in the hose is below the level of the liquid being siphoned. At that point the flow will maintain itself. NOTE: This product should **not** be used with hot liquids!

Cleaning

Disassemble the Phil's Psyphon Starter from the racking cane and soak it along with your other equipment in your usual sanitizer. **Do not boil!**

